



Existing Installation

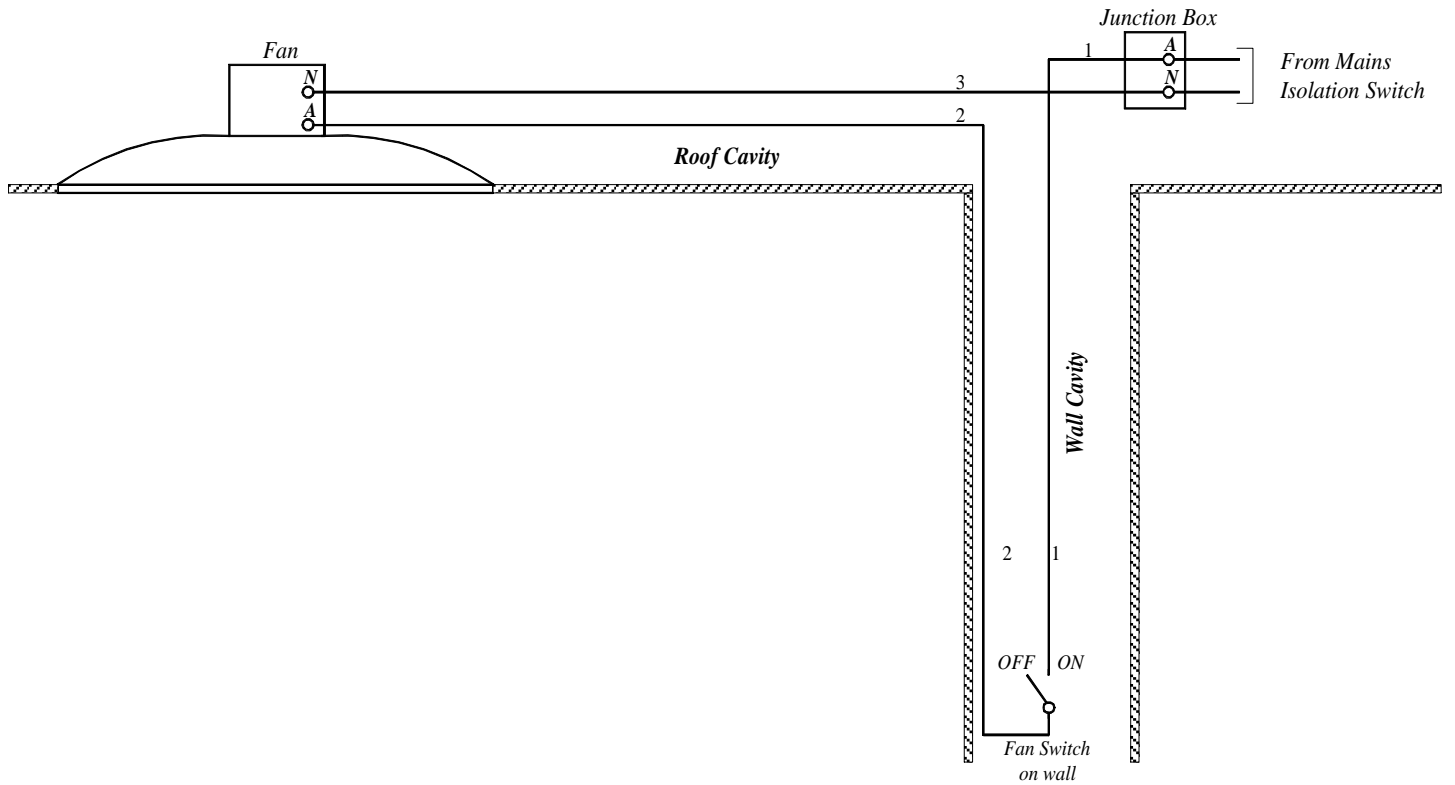

Retrofitting a Vapotec VTSOR

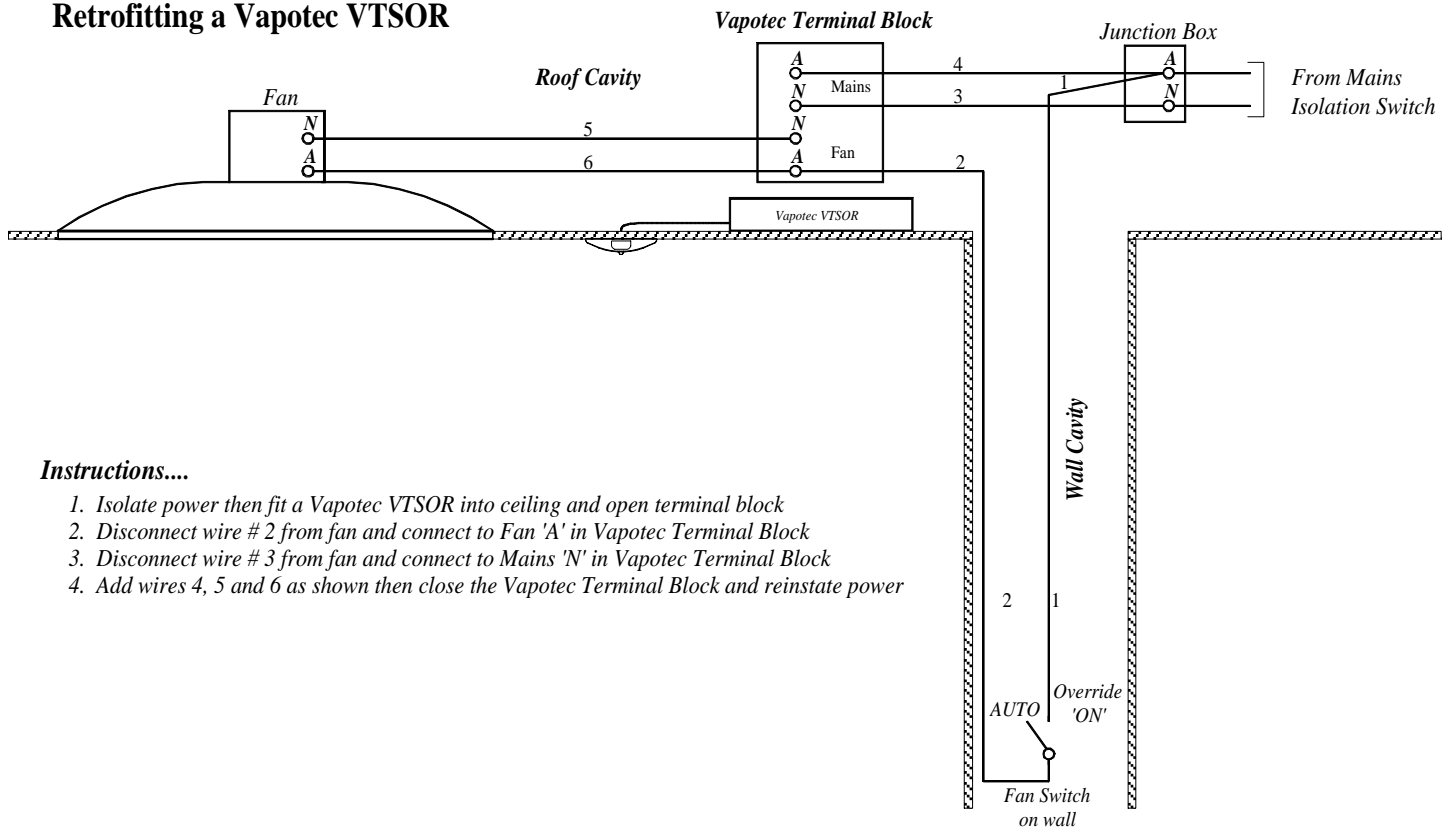

Instructions....

1. Isolate power then fit a Vapotec VTSOR into ceiling and open terminal block
2. Disconnect wire # 2 from fan and connect to Fan 'A' in Vapotec Terminal Block
3. Disconnect wire # 3 from fan and connect to Mains 'N' in Vapotec Terminal Block
4. Add wires 4, 5 and 6 as shown then close the Vapotec Terminal Block and reinstate power