



Existing Installation - Fan & Light on same switch

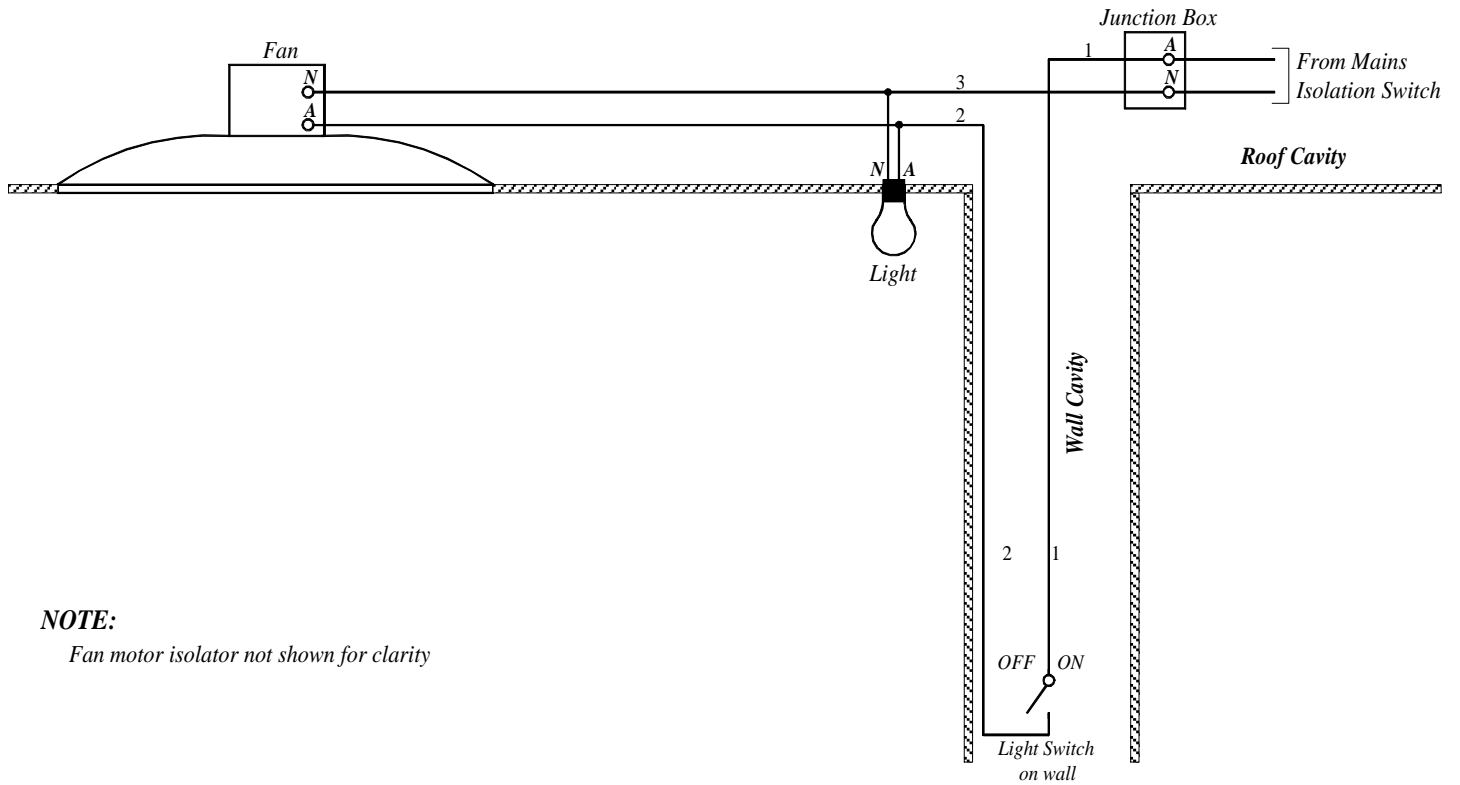

NOTE:

Fan motor isolator not shown for clarity

Retrofitting a Vapotec VTSOR - Retaining Light & Fan override function

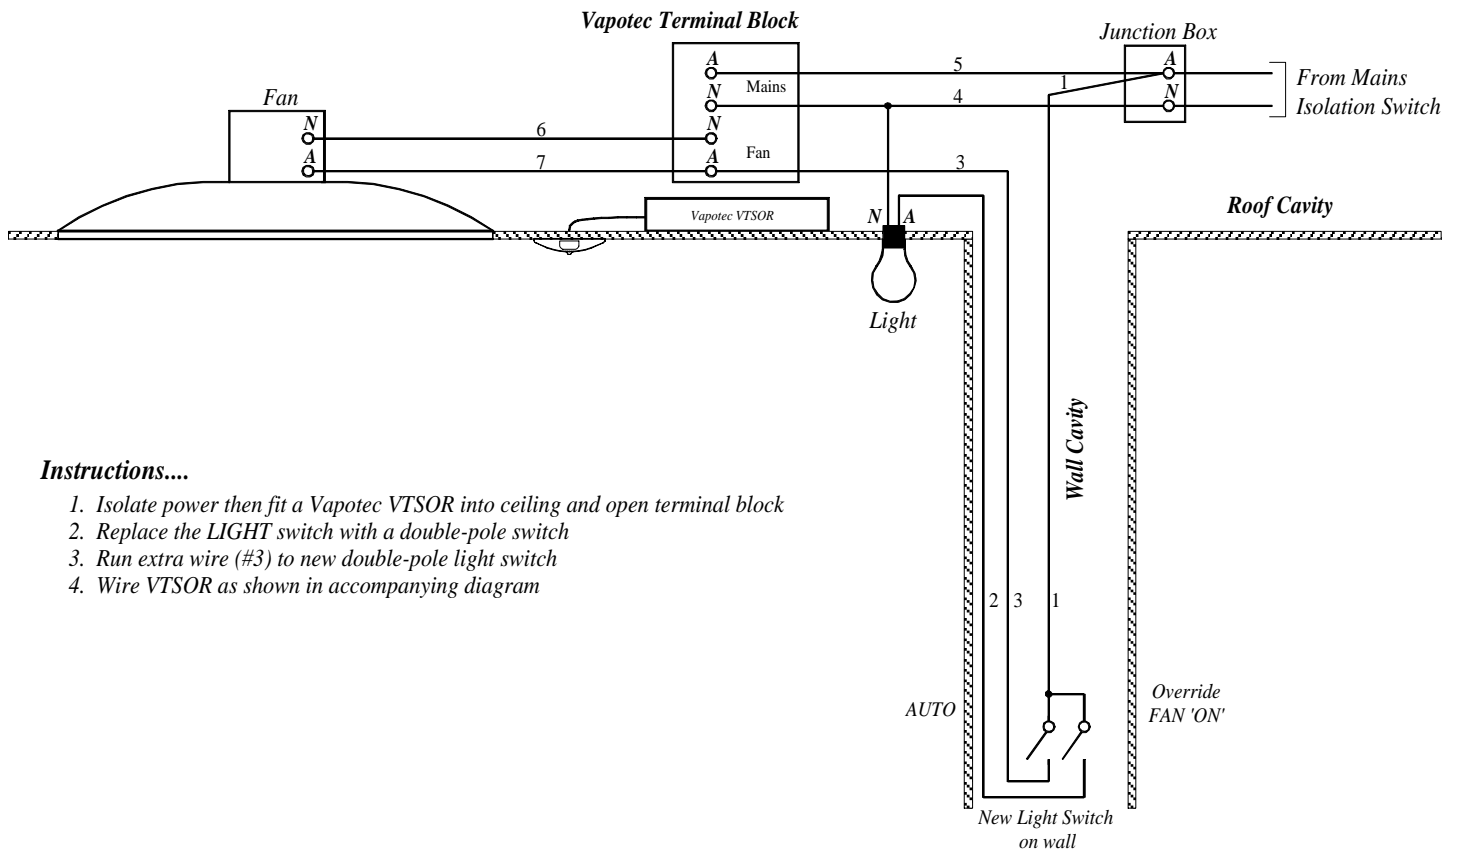

Instructions....

1. Isolate power then fit a Vapotec VTSOR into ceiling and open terminal block
2. Replace the LIGHT switch with a double-pole switch
3. Run extra wire (#3) to new double-pole light switch
4. Wire VTSOR as shown in accompanying diagram