Installing a Vapotec VTSOR - Featuring Light & Fan override function

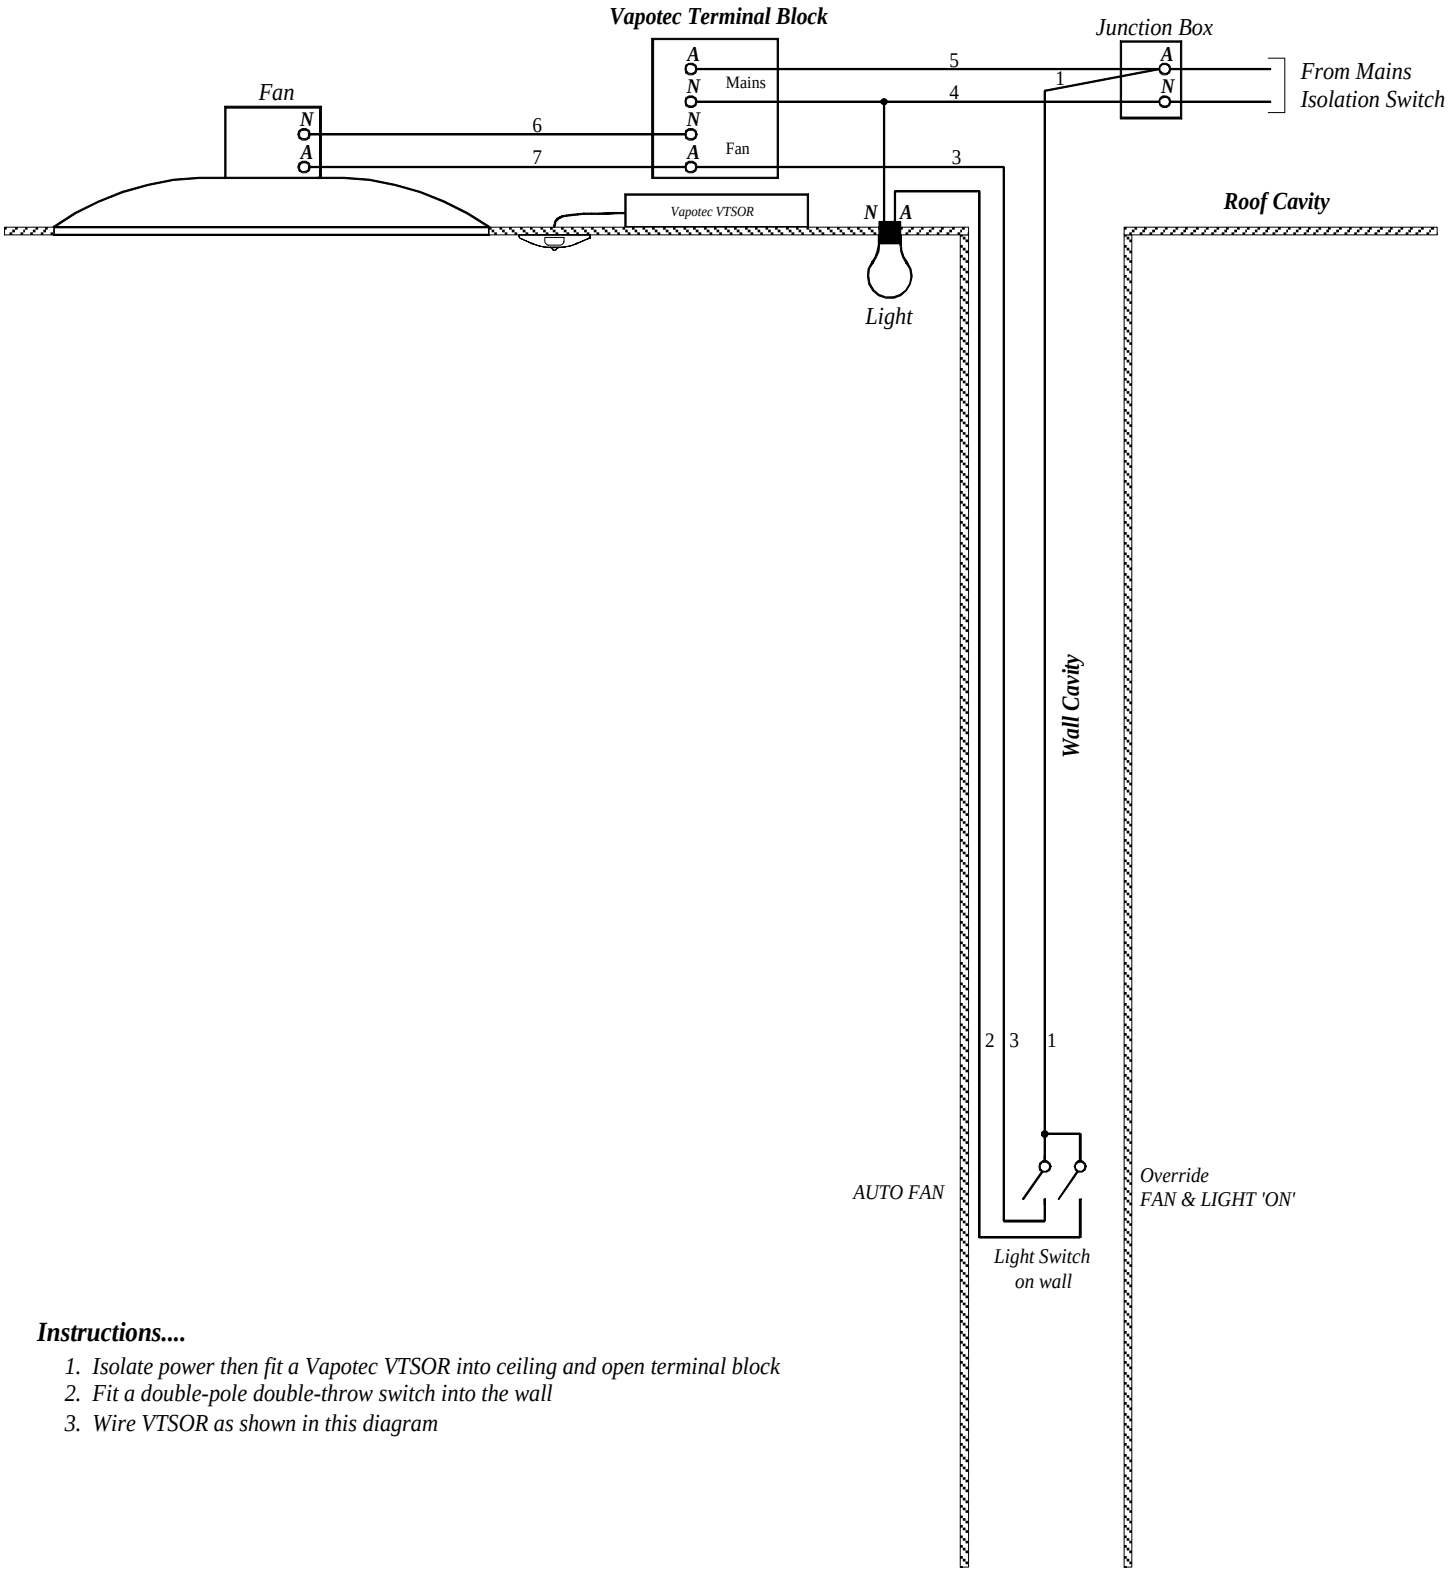

Instructions....

1. *Isolate power then fit a Vapotec VTSOR into ceiling and open terminal block*
2. *Fit a double-pole double-throw switch into the wall*
3. *Wire VTSOR as shown in this diagram*

VAPOTEC
The Steam Sensor

The automatic bathroom exhaust-fan switch

Installing a Vapotec VTSOR

Featuring 'Fan ON when Light ON' function

Drawing No: VWD-03